


## PARTS LIST

In the unlikely event you are missing any components please call 0117 934 1790 and state the name of the product, size and description of the item. i.e. Classic Extra Vine Arch Matt Black, 1 x End Plug.

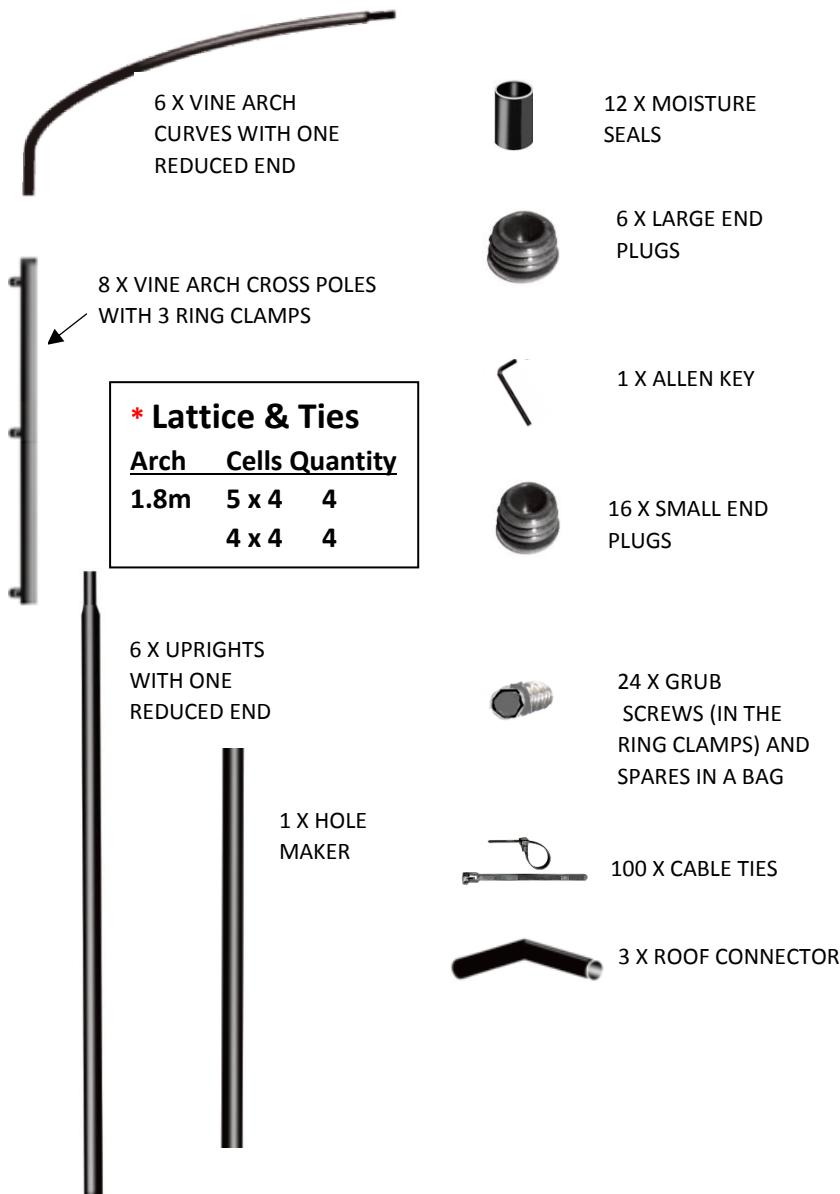

# Agriframes™

## Assembly Instructions for Classic Extra Vine Arch - Matt Black

Product Code: 39100-TBK



Please read the assembly instructions carefully prior to construction.

### Tips:

#### Positioning of the Cross Poles

In many cases the position of the Cross Poles is down to personal preference. However, if you have the lattice option you will need to leave the correct distance between bars.

On the bottom section the Cross Poles need to be at least 3 inches above the base of the tube.

**Tips:**  
**Cross Poles**

Before positioning the Cross Poles on the uprights, half screw in the grub screws to the ring clamps on the spacer bars, to reduce the risk of losing the screws. Once correctly positioned tighten the grub screw to secure the spacer bar to the uprights.

#### Lattice Panel

For illustrative purposes we have only shown one side fixed with the lattice panels. Attach panels to both sides as you proceed.

### Issues:

If you are experiencing any issues with your Agriframes product please contact our customer services team on 0117 934 1790 and quote your order reference.


**WARNING:** Contains small parts, tools and plastic bags. Keep children away until the unit is assembled and everything is cleared away.

**NOTE:** The card, paper sack, and polythene bags are recyclable - please dispose of carefully.


**MISSING PARTS PROCEDURE:** Please call our customer service team on 0117 934 1790 and quote your order reference and quote the missing part. *E.g. ASO----, 2 uprights missing.*

# CLASSIC EXTRA VINE ARCH - MATT BLACK


STEP 1:

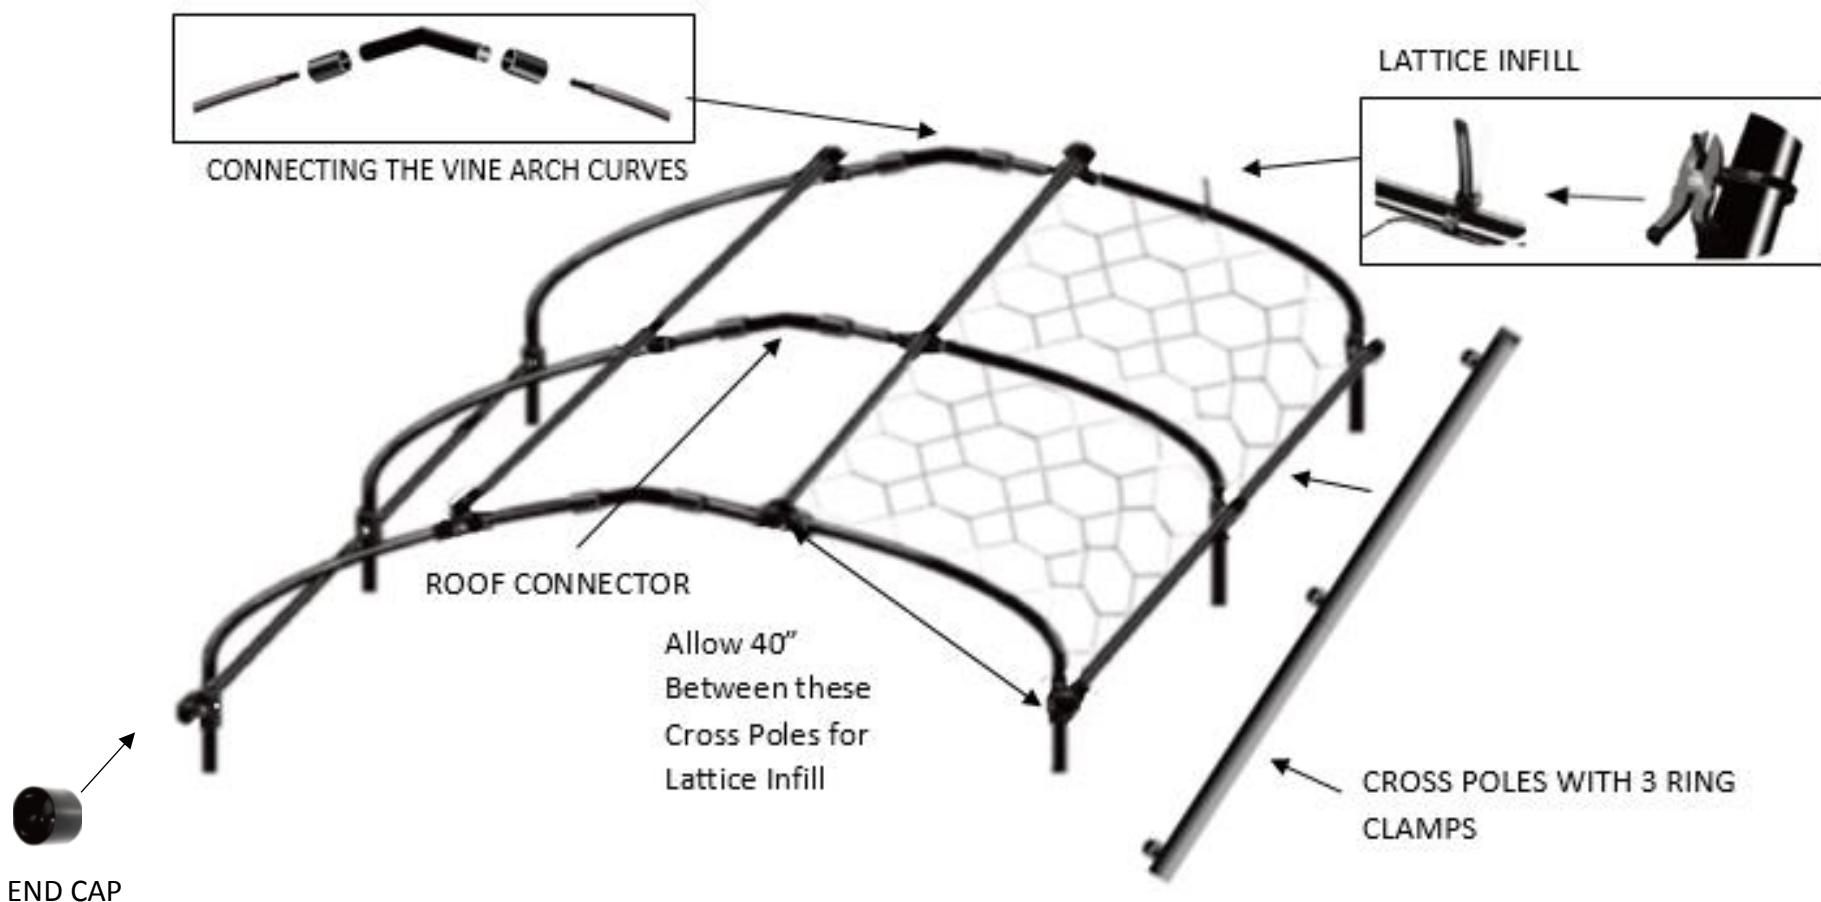


STEP 2:

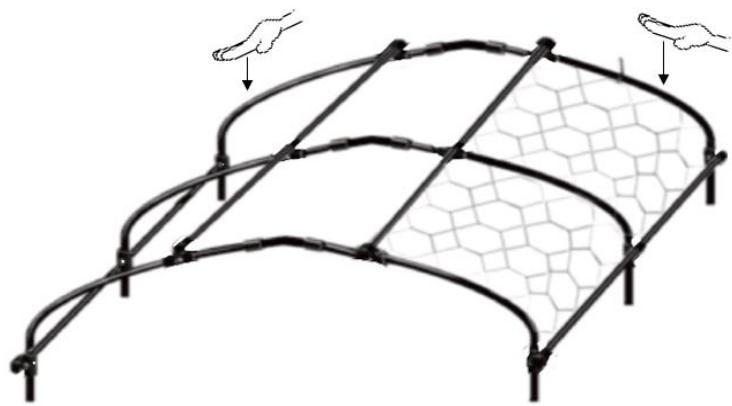


STEP 4:

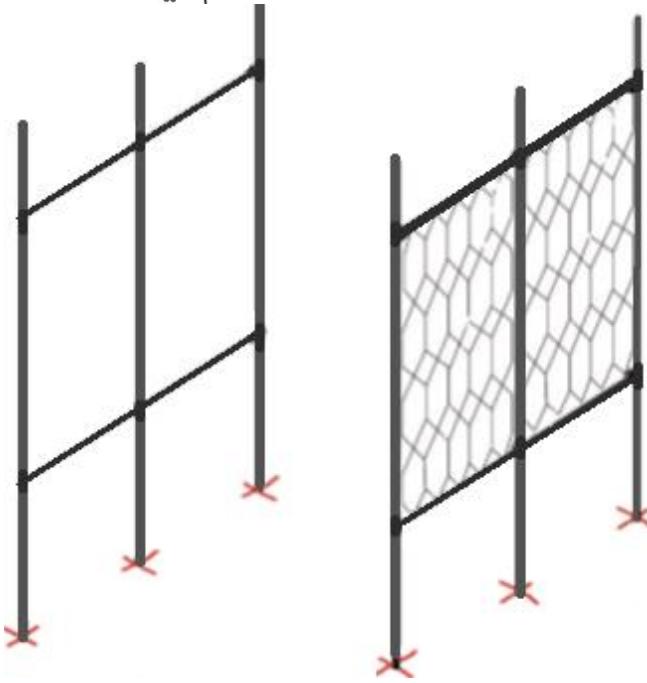

STEP 3:

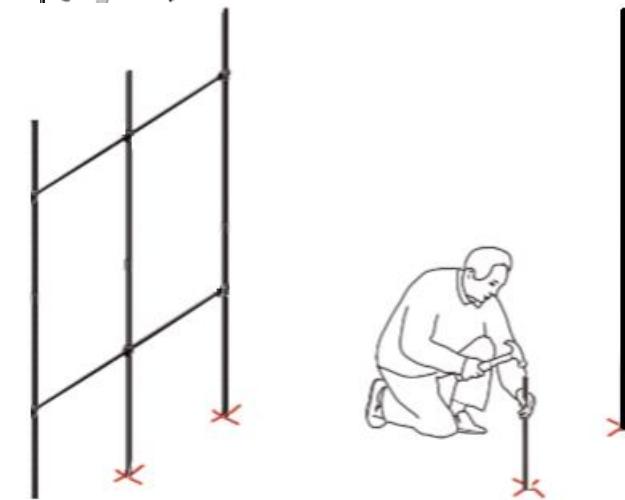

STEP 5:

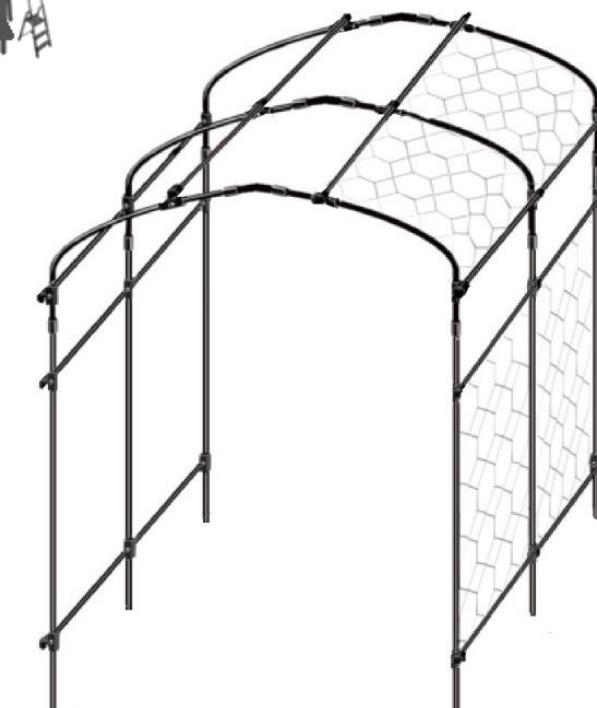

\* ONLY FOR ORDERS WITH LATTICE PANELS. PANELS CAN BE ORDERED FROM [www.agriframes.co.uk](http://www.agriframes.co.uk)

## **Assembly Instructions for Classic Extra Vine Arch Matt Black**

Please read these instructions carefully.

**Assembly Requires:** a Rubber Mallet, an Allen Key (provided), a Ladder, Spirit Level, Pliers and a Tape Measure.

### **Step 1:**

- Before assembly check the cross poles to ensure the grub screws are inserted into the holes on the ring clamps.
  - Loosen these grub screws  $\frac{1}{2}$  way out of the hole, to ensure when the ring clamps are moved into position the grub screw does not scratch the outer coating of the metal.
- Slide a moisture seal onto the reduced ends of all the vine arch curves.
- Connect the reduced ends of 2 Vine Arch curves into the roof connectors, cover the joins between the poles with moisture seals. Repeat this process with all of the Vine Arch Curves.
- Slide a Cross pole onto the Vine Arch curves, on the outside of the arch.
  - Starting with the top cross poles, these poles should be positioned towards the join of the curves. Once you are satisfied with the cross poles position tighten the grub screw.
  - The second cross pole needs to be placed 40" below the top Cross Pole, to allow for the lattice infill. This may require the second cross pole to be positioned on the join between the curve and the upright.
- Slide a moisture seal over the end of the curve.
- Attach the small end plug to the ends of the Cross poles.
- **Attach the lattice using the cable ties, once the ties are secured trim the excess.**

### **Step 2:**

- Once the top of the arch has been completed move the structure to where it is to be installed and, firmly push the structure into the ground to make an impression, indentation or mark to indicate where the uprights should be placed. Then remove the top structure and check that the marks can clearly be seen.

### **Step 3:**

- Using the hole-maker create a hole 15" into the ground, where you have marked or indented the ground previously, ensure that the holes are vertical and to the same depth.
- Insert the end plugs into the non-reduced ends of the 6 uprights, then insert these uprights into the hole in ground, with the end plugs going into the soil.

**Step 4:**

- Once the uprights have been inserted, slide on 2 sets of Cross Poles to each set of uprights and once you are satisfied with the Cross Poles Position tighten the grub screws. Repeat this action with the remaining 2 Cross Poles on the remaining uprights. Slide moisture seals over the reduced end of the uprights.
  - If you are have chosen the lattice option you will need to position the Cross Poles, on the uprights, approximately 50" away from one another, to accommodate the lattice infill.
- Attach the lattice using the cable ties, once the ties are secured trim the excess.**

**Step 5:**

- Lift the constructed Arch top onto the uprights, cover the joins with moisture seals.
  - You will need at least 2 people for this step due to the weight of the Arch top.

**If you have any questions regarding assembly please call our customer service team on 0117 934 1790**