




## 11510-TBK 11511-TBK (Extension)

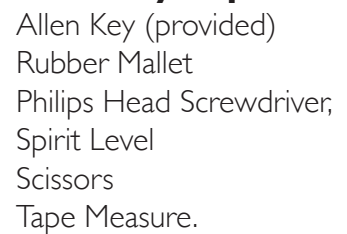

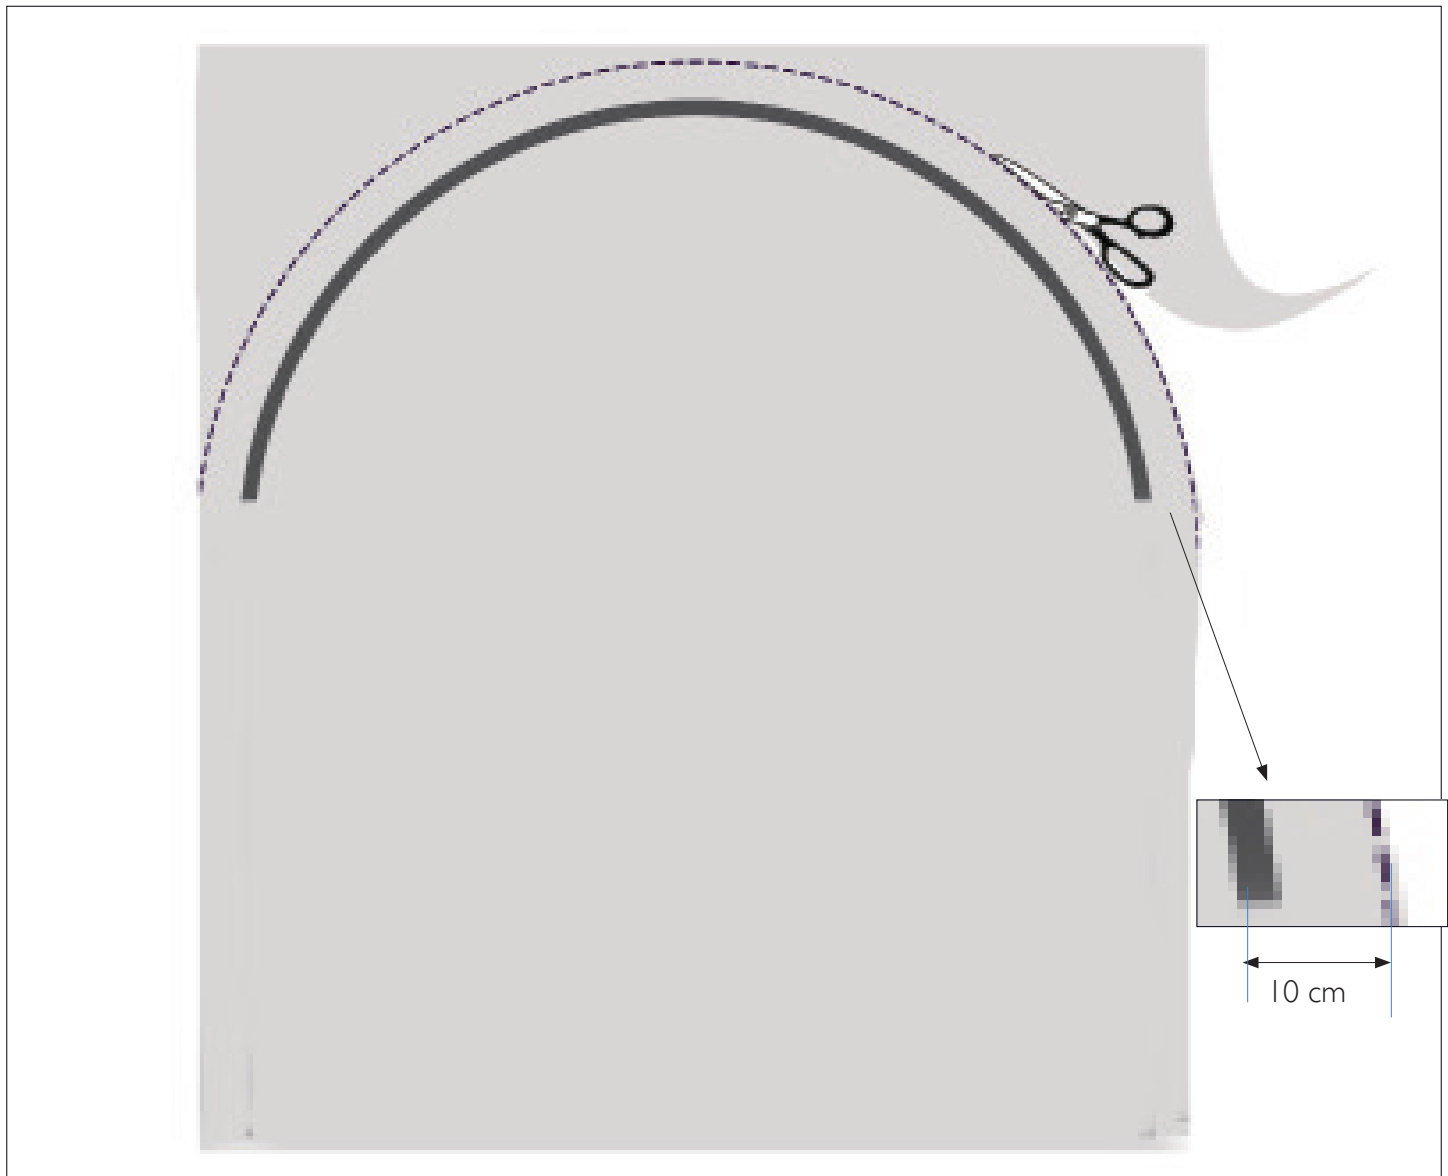

Lay both 4m x 4m nets out on the ground.. Join an arch and place at the top and cut 10cm approx around the arch.

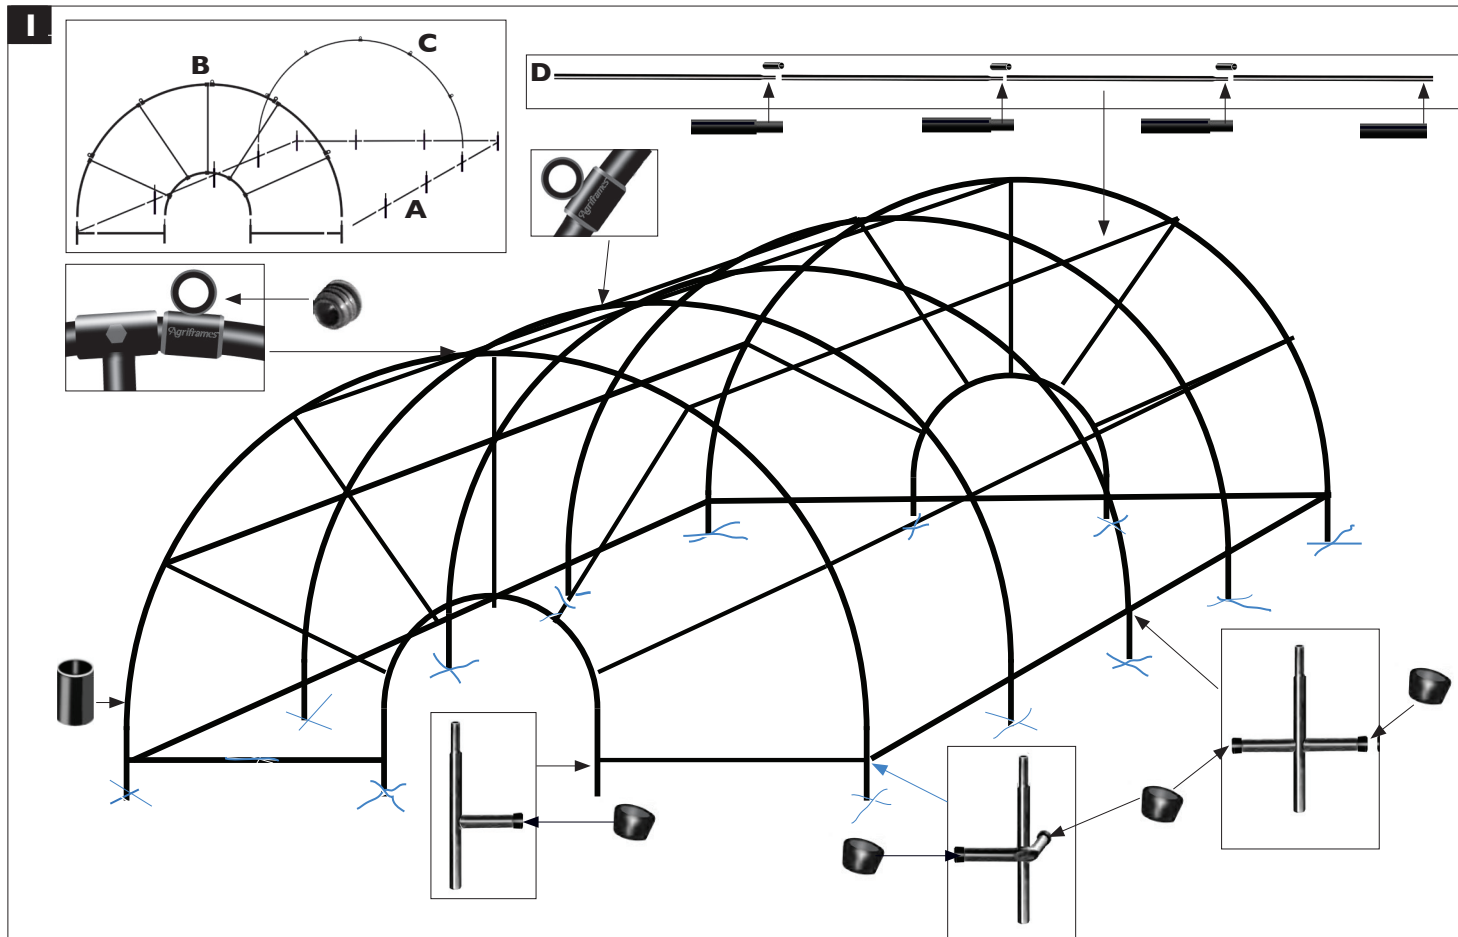

## ROOF BASE. (A)

26 Rattle rings  
4 Corner joints  
8 Cross joints  
4 Door shoulder joints  
2 Door arches  
12 Side horizontal bars

## FRONT & REAR ARCH. (B)

Each Arch:  
2 X 3m dia. curves  
(plain & reduced ends)  
5 X 2-way joints  
5 Arch tie bars  
1 Door frame arch  
2. Moisture seals

## 3 CENTRE ARCHES (C)


Each Arch:  
2 X 3m dia. curves  
(plain & reduced ends)  
5 X 2-way joints  
2. moisture seals..

## 5 PERLINS (D)


Assemble perlin and attach moisture only when threading them through the roof structure  
Each perlin  
(3 with reduced ends  
1 plain end)  
3 moisture seals

## ASSEMBLE ROOF

Attach the arches to the base.  
Thread the perling through the 2 way joints.  
Tighten all joints.  
Position structure and mark where the uprights should go.

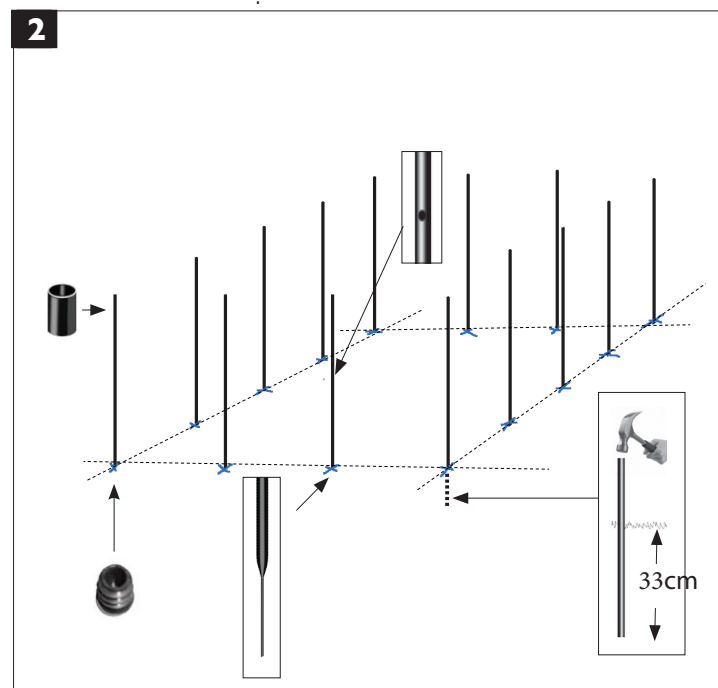


Make a pilot hole to the depth marked on the hole-maker.  
Place the door catch upright opposite to where the door will hang  
Insert end plugs into the bottom of each upright  
Place a moisture seal at the top of all the uprights.

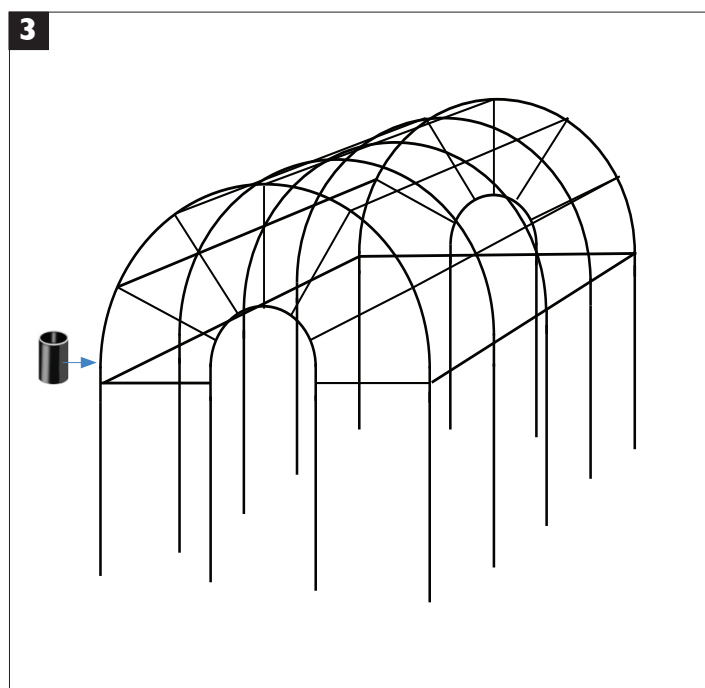


It is best to get the help of 3 more people to lift the roof onto the uprights.  
Manoeuvre the moisture seals on the upright to cover the joints.

5

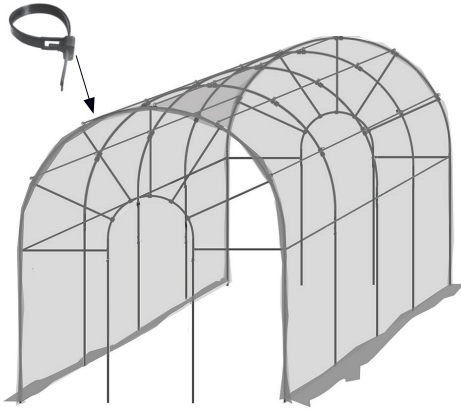


Take the 8m x 4m rectangular net over the frame. Gather the surplus at each end, secure with cable ties approximately every 25 cm.

6

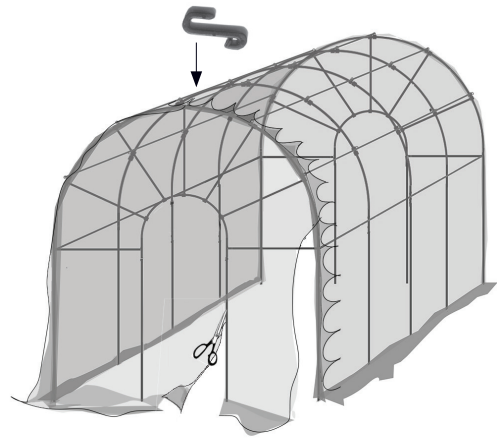


Place one 4m x 4m square of net to the front of the frame. Attach the net to the frame with 'S' Hooks. Cut out net you will need to cover the door:

7

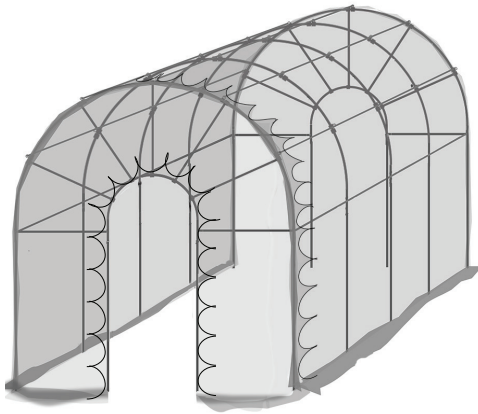


Attach the remains of the net around the door frame and secure with 'S' Hooks

8

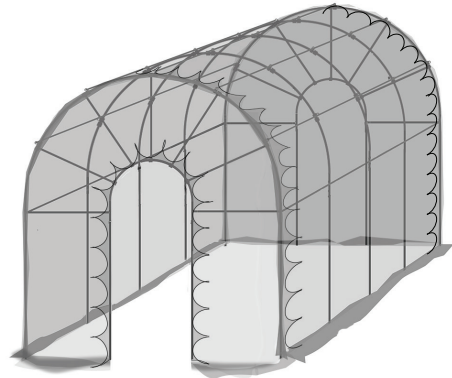


Place one 4m x 4m square of net to the back of the frame. Attach the net to the main net with 'S' Hooks

9

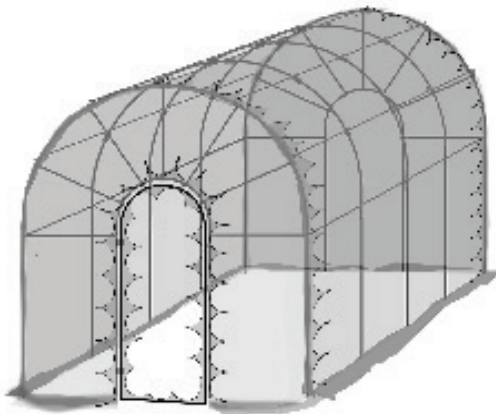

Attach the completed door to the door frame  
**Door Assembly** see next page.

10

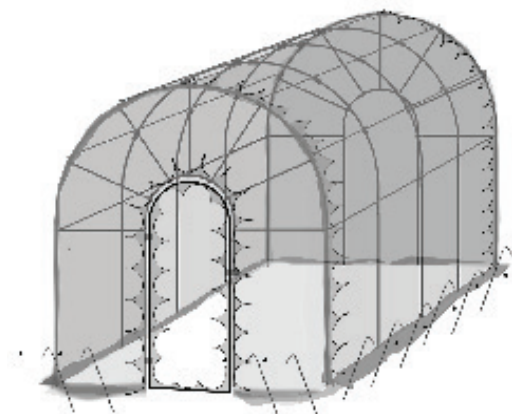


Finally wrap the net at the base to the frame, tie with cable ties and secure to the ground with ground hooks.


4





**4a.** Lay the door frame parts out and thread 2 moisture seals and 2 collars on 1 upright and 2 moisture seals on the other.

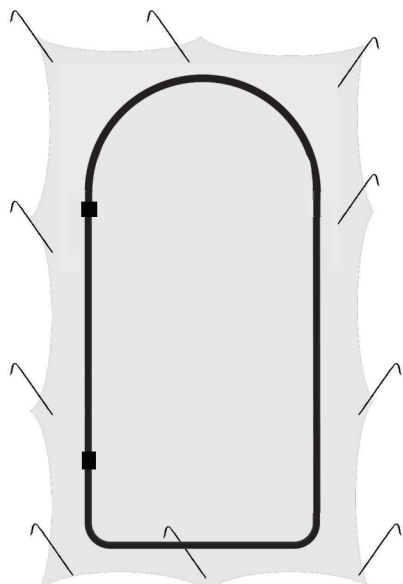

**4c.** Spread out the net cut for the door and slightly stretch using the ground pegs. Place the door on the net.

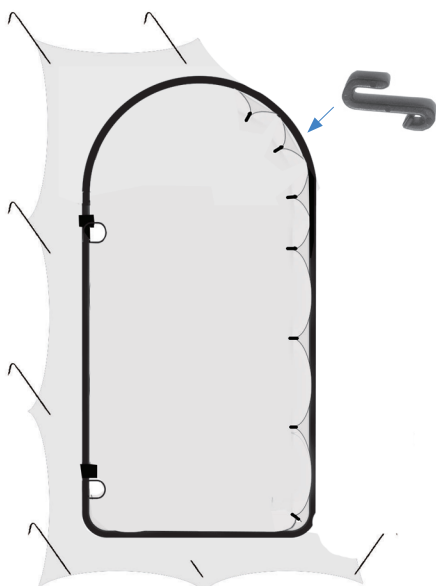



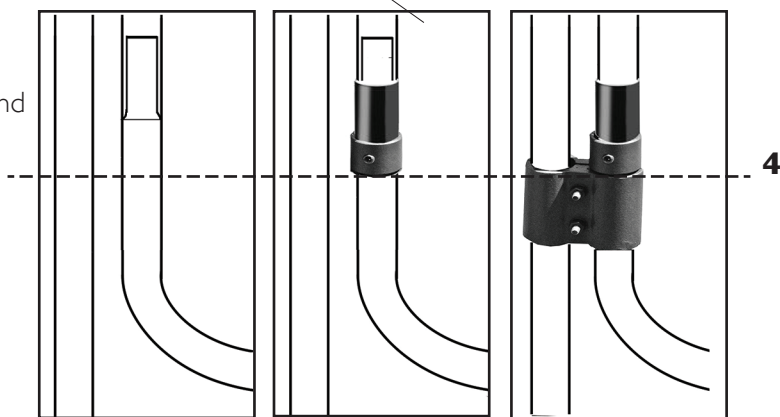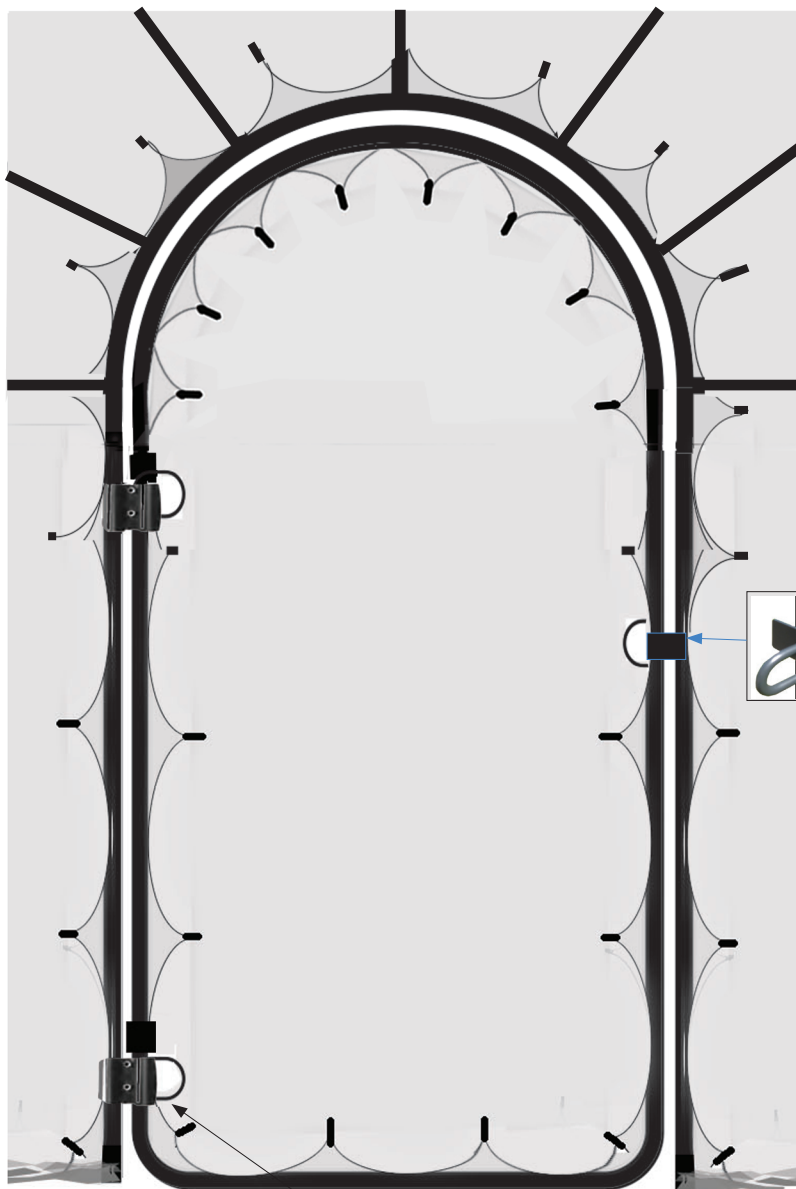




**4d.** Attach the net to the door frame with 'S' hooks.







**4f.** Attach the door to the hinge upright using parallel clamps. Make the sure the collars on the hinge upright line up with the top of the parallel clamp. See fig 4

## DOOR PARTS

CODE	PART	No
 <b>AGR-A610/40</b>	3/4" Moisture Seal	6
 <b>AGR-CLAMP 001</b>	Aluminium Parallel Clamp	2
 <b>AGR-A74/002</b>	M4 x 25mm Socket Screw	4
 <b>AGR-A72/001</b>	M4 Hexagon Nut	4
 <b>AGR-A75/000</b>	M4 Form A Washer	4
 <b>AGR-A70/006</b>	3mm Allen Key	1
	<b>AGR-CATCH002</b> Door Catch 7/8"	1
 <b>AGR-COLLAR 001-TBK</b>	Metal Door Collar	2

## AGR-RFC-CAGE11-TBK

## Door Kit

	Door top with plain ends	1
	Door Uprights with reduced ends	2
	Door Bottom with reduced ends	1
	Door hinge upright with drill.	1

We recommend you check all the contents prior to building your product. In the unlikely event that any please call our customer service team on 0117 934 1790 and quote your order reference and the code for your missing part. If no code just quote the part E.g. 2.4m Roof bar with plain end.






















**Issues:**

If you are experiencing any issues with your Agriframes product please contact our customer services team on 0117 934 1790 and quote your order reference.

**WARNING**, Contains small parts, tools and plastic bags. Keep children away until the unit is assembled and everything is cleared away.

**NOTE** the card, paper sack, and polythene bags are recyclable - please dispose of carefully.

## FRAME PARTS

CODE	PART	No	Ext.
 <b>AGR-RFC-CAGE-01-TBK</b> <b>AGR-RFC-CAGE-02-TBK</b>	Purlins with reduced end with plain end	15 5	20
 <b>AGR-RFC-CAGE-03-TBK</b>	Side uprights with reduced end	14	16
 <b>AGR-RFC-CAGE-04-TBK</b>	Horizontal tie bars with plain ends	13	15
 <b>AGR-RFC-CAGE-05-TBK</b>	Connecting tubes	10	
 <b>AGR-RFC-CAGE-06-TBK</b>	3m dia. curve with reduced ends with plain ends	5 5	6 6
 <b>AGR-RFC-CAGE-07-TBK</b>			
 <b>AGR-RFC-CAGE-08-TBK</b>	3-way door joint	2	
 <b>AGR-RFC-CAGE-09-TBK</b>	3-way corner joint	4	
 <b>AGR-RFC-CAGE-10-TBK</b>	4-way cross joint	8	10
 <b>AGR-A610/07</b>	Rattle rings	26	
 <b>AGR-A610/05</b>	End plugs 7/8"	14	
 <b>AGR-A610/06</b>	End plugs 5/8"	10	
 <b>AGR-A610/41</b>	2-way joint 3/4" x 5/8"	25	
 <b>AGR-A73/006</b>	6mm Grub Screws	76	
 <b>AGR-A610/41</b>	Moisture Seals Large	14	
 <b>AGR-A610/40</b>	Moisture Seals Medium	17	
 <b>AGR-A610/38</b>	Moisture Seals Small	15	
NET PARTS			
 <b>AGR-A70/001</b>	Cable ties	75	
 <b>AGR-A610/31</b>	S' Hooks	100	
 <b>AGR-F/C-GROUND-HOOK</b>	GROUND HOOKS	70	
	Net 8m X 4m	1	
	4m X 4m	2	

# Agriframes™